





INSTRUCTIONS






www.purrplelighting.com

PD-JV-23 20

$(2700 \, \text{K} - 20 \, \text{W})$

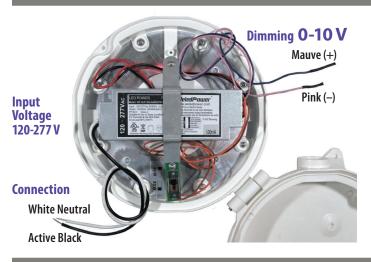

- Punch out the holes of the chosen conduit
- Coat the screws with anti-seize before installing them

PD-JV-23 20/30

$(5000 \, \text{K} - 20/30 \, \text{W})$



- Punch out the holes of the chosen conduit
- Coat the screws with anti-seize before installing them

Selectable Power



Installation by qualified personnel only

Operating Temperature: -25 °C $\sim +40\,^{\circ}\text{C}$